

CoolMasterNet Technical Data



CoolMasterNet Universal Interface Adapter for HVAC Systems





Attention

1. During the HVAC system automatic operations the CoolMasterNet must be disconnected from the system. Examples of the automatic operations are:

- Test
- Reset
- Automatic charge

2. Do not change the original positions of the quadruple dip switch S inside CoolMasterNet when using it with VRV/VRF systems.

WEEE Directive & Product Disposal



At the end of its serviceable life, this product should not be treated as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.



Table of Contents

1 Features	4
2 Layout	5
3 Physical data	6
4 Specifications	7
5 LCD data	8
6 HVAC Interfaces	9
7 GPIO	10
8 Options	11





1 Features


- Seamless integration of HVAC systems with all Home Automation/BMS controllers
- Compatibility with all VRV/VRF HVAC brands e.g. Daikin, Mitsubishi Electric, etc
- Multi-brand simultaneous support
- Interfaces via RS232 (ASCII), RS485 (MODBUS RTU according to EIA/TIA-485 standard), Ethernet (ASCII & MODBUS IP) for all HVAC brands
- Full control & monitoring of HVAC indoor units operation
- Color LCD with Touch Screen for control and system management
- "All On" / "All Off" capability using external signal (e.g. for fire alarm systems)
- Configurable GPIO
- Remote access by Smart Phone, Tablet and PC (www.CoolRemote.net). Supported by operating systems: Windows, IOS, Android
- Cloud integration
- HVAC systems diagnostics (optional)
- Direct KNX interface (optional extension board)



2 Layout

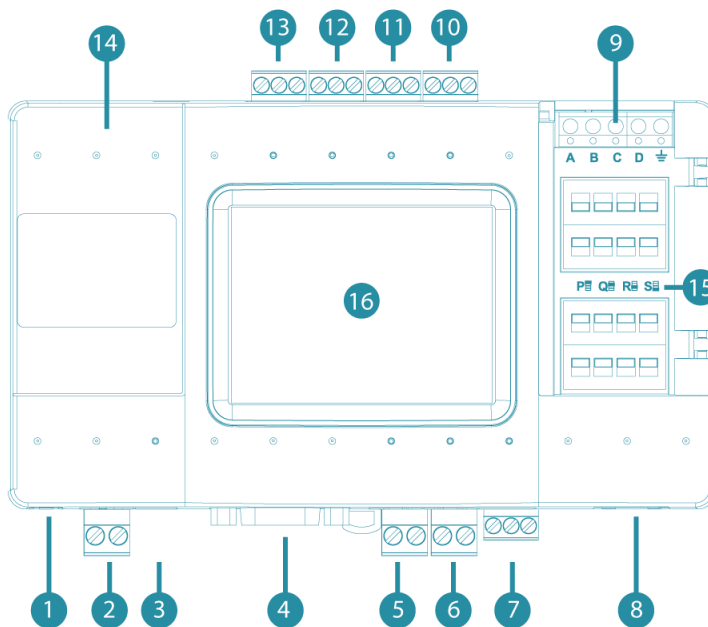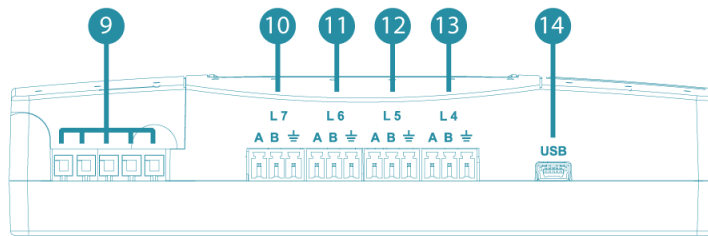


- 1. USB Host
- 2. Power
- 3. Power Plug
- 4. RS232 Port
- 5. HVAC Line L1
- 6. HVAC Line L2
- 7. HVAC Line L3 or RS485 Port
- 8. Ethernet Port
- 9. GPIOs
- 10. HVAC Line L7
- 11. HVAC Line L6
- 12. HVAC Line L5
- 13. HVAC Line L4
- 14. USB Device Port
- 15. DIP Switches P,Q, R,S
- 16. LCD with Touch Screen

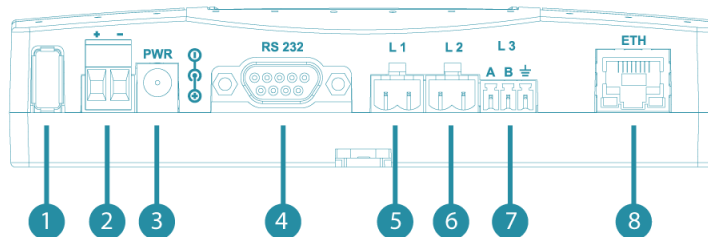



3 Physical data

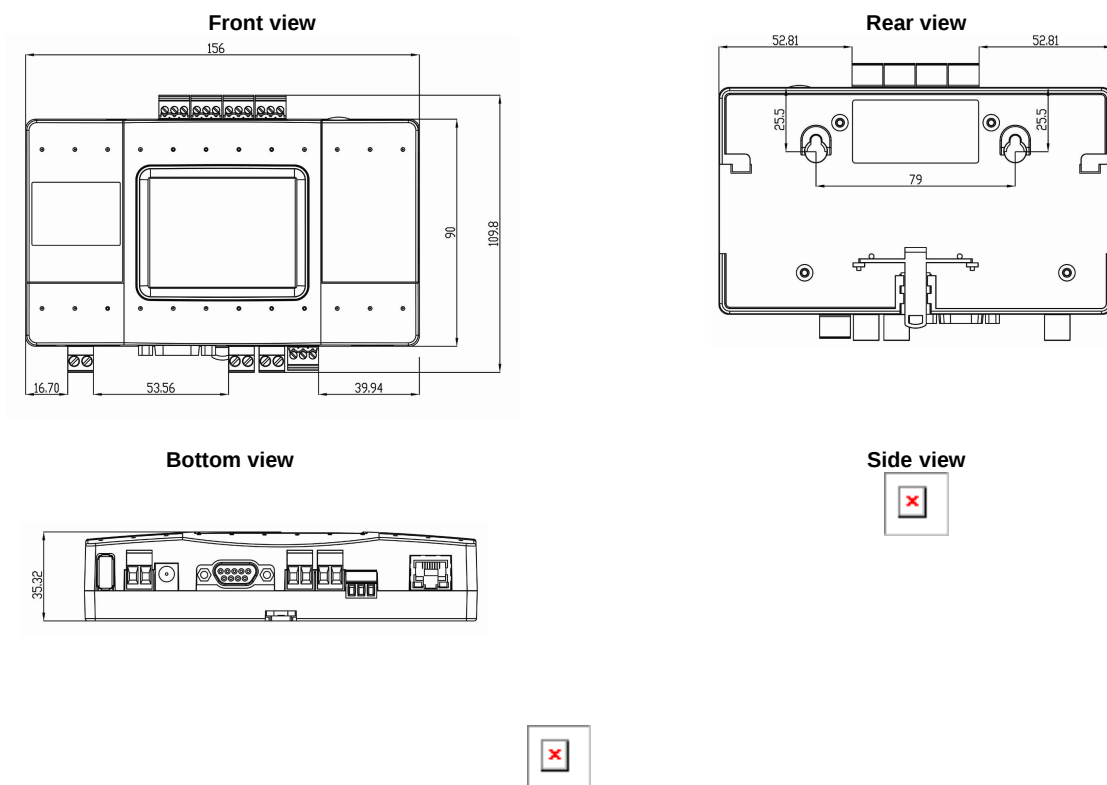

Product dimensions and weight:

Dimensions (HxWxD)	90 x 156 x 35 [mm]	3.54 x 6.14 x 1.33 ["]
Weight	266 [Gram]	0.58 [lbs]

Transportation packing dimensions and weight:

Dimensions (HxWxD)	70x140x280 [mm]	2.75x5.51x11.02 ["]
Weight	800 [Gram]	1.76 [lbs]

4 Specifications

Parameter		Data
Power supply	Min load*	5V/175mA (via mini USB); 12V/120mA; 24V/70mA
	Max load**	5V/300mA (via mini USB); 12V/200mA; 24V/120mA
Mounting		DIN rail / wall
Operating conditions	Ambient temperature	-10°C ~ 60°C / 14°F ~ 140°F
	Humidity	0% ~ 96% non-condensing
Storage conditions	Ambient temperature	-20°C ~ 70°C / -4°F ~ 158°F
	Humidity	0 % ~ 98 % non-condensing
Dimensions	HxWxD	156 x 109.8 x 35.32 [mm] / 6.14 x 4.32 x 1.39 ["]
LCD	Size / # of dots / # of colors	2.8" / 240 x 320 / 262K
Input	Touch panel	8 bit encoded analog input
Communication functions	Direct HVAC connection	Connection to the 2 wired HVAC bus
	MODBUS (A / B)	RS-485 communication line
	Ethernet	100Mbps
	RS-232	DB9, 9600Bps, ASCII
	USB Host	12Mbps
	USB mini	12Mbps
Maximal allowable wiring length (to BMS) over RS232		25 [m] / 82 [ft]
Maximal allowable wiring length (to BMS) over RS485		1000 [m] / 3300 [ft]
Maximal allowable wiring length (to router) over Ethernet		137 [m] / 450 [ft]
Certification		FCC, CE (EN 60335-1, EN 60335-2-40)

*One HVAC line and Ethernet are connected.


**USB host, Ethernet, HVAC lines 1-7 are connected.

5 LCD data

Technical data:

Display Type	TFT NEGATIVE TRANSMISSIVE
Display Color	262K
Display Format	240x320 (RGB)
Operation Temperature	-10°C ~ 60°C / 14°F ~ 140°F
Storage Temperature	-20°C ~ 70°C / -4°F ~ 158°F
Back light Color	WHITE
Dimension (H x W)	57.6 x 43.2 [mm] / 2.26 x 1.70 ["]
Touch panel	Resistive

Dimensions:

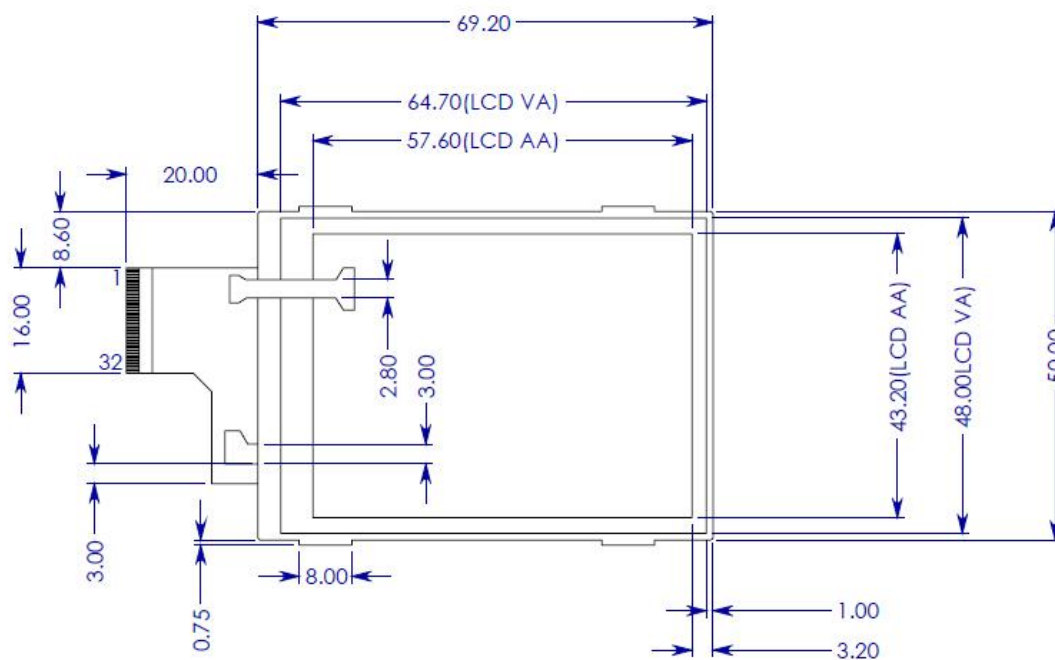

6 HVAC Interfaces

CoolMasterNet supports various HVAC systems, that have to be connected to designated lines L1-L7. These lines support single or multi brand HVAC, based on limitations, specified below.

HVAC connectivity table (for single HVAC line use)

Line #	Manufacturer	Interface	Terminals		Polarity	Maximum Indoor Units (Manufacturers limitation)	Maximum Outdoor Units (Manufacturers Limitation)
L1/L2	Daikin	DIII-NET	F1	F2	none	64	10
	Sanyo	S-NET	U1	U2	none	64	40
	Panasonic		U1	U2	none	64	40
	Toshiba	TCC LINK	U1	U2	none	128	40
	Mitsubishi Electric	M-NET	M1	M2	none	50	10
	Hitachi	H Link, H Link 2	1	2	none	64	10
L4/L5	LG		Inter A	Inter B	+ -	128	-
	Gree		A	B	+ -	16	4
	Mitsubishi Heavy Industries	SuperLink / New SuperLink	A	B	+ -	128	10
	Samsung		F1 F2 / R1 R2		+ -	64	10
L6/L7*	LG		Inter A	Inter B	+ -	128	-
	Gree		A	B	+ -	16	4
	Mitsubishi Heavy Industries	SuperLink / New SuperLink	A	B	+ -	128	10
	Samsung		F1 F2 / R1 R2		+ -	64	10
USB device Port	Fujitsu (external LON USB adapter required)	LON (ANSI/CEA-709.1-B)	X1	X2	none	128	10

Possible Multi HVAC Brand connectivity options

	L1	L2	L4	L5	L6	L7
L1**		✓	✓		✓	✓
L2**	✓		✓	✓		✓
L4	✓	✓		✓	✓	✓
L5**		✓	✓		✓	✓
L6* **	✓		✓	✓		✓
L7*	✓	✓	✓	✓	✓	

Limitations:

Total number of supported indoors (for all HVAC ports) cannot exceed 256 units

*When DIP switches P1 and P2 are "ON", line L6 and L7 cannot be used as separated lines (either L6 or L7), but the polarity on the HVAC won't be required.

**In any case L2 cannot be connected simultaneously with L6 and L1 cannot be connected simultaneously with L5.



7 GPIO

Parameter	GPIO A	GPIO B	GPIO C	GPIO D
V _{IL}	<1V	<1V	<1V	ADC
V _{IH}	>2.4V	>2.4V	>2.4V	ADC
V _{OUT HI}	3.3V	3.3V	3.3V	3.3V
I _{OUT}	20mA	20mA	20mA	20mA
Pull Up	5.6K	5.6K	5.6K	N.A.



8 Options

- **PRO**

This option is available for Daikin, Mitsubishi Electric and Hitachi, and allows to perform analysis on the HVAC data for service purposes and energy management. It can be enabled on any existing device by activation string.

- **KNX**

Optional PCB board, that can be mounted inside the CoolMasterNet providing direct connection to the KNX bus.

- **Multiple HVAC Port connection.**

This option allows to activate several HVAC lines simultaneously for increasing the number of supported indoors or supporting different HVAC brands on the same site. It can be enabled on any existing device by activation string.

- **GPIO Functions**

CoolMasterNet has 4 digital GPIO, that can be configured for customized applications/functions. By default, GPIO A and B are configured for "All Off" and "All On" functions correspondingly, triggered by external signal.